

Replacement Canopy Installation Instruction

(Revised 2012)

Remove the cover from the box. Place the canopy fabric bundle on top of the frame and unroll the canopy down the center of the frame. When completely unrolled, unfold the cover across the top of the canopy bows and pull down snugly over the frame. Make sure the canopy is centered on the frame with equal amounts of overhang on each side and on each end.

The QuikLash black webbing should be on the inside, right behind or slightly above the aluminum canopy frame going lengthwise.

Use the following attachment option for your brand of canopy frame.

ShoreMaster, Pier Pleasure, Daka, Newman, Porta Lift, Feighner, Triton, Vibo

This canopy uses individual bungees with a hook on the end. Attach each bungee through a perforated hole of the QuikLash webbing directly in-line with each canopy rib. Stretch the bungee underneath the canopy frame and up into the hole in the corresponding frame rib. Alternate from side to side and end to end to make sure the top does not become off centered.

* Some canopy frames feature a support bar welded across the length of the canopy frame. Attach each bungee through a perforated hole of the QuikLash webbing and stretch bungee underneath the canopy frame and upward... hooking the bungee hook onto the horizontal support bar. Evenly space the bungees around the perimeter of the frame, alternating from side to side and end to end.



Floe

Everything is attached to the replacement top. No additional parts are needed. Just pull elastic down around the frame and hook onto the aluminum frame with the extruded lip and adjust tension accordingly. Alternate from one side of the canopy to the other this to avoid off centering the canopy. Velcro the ends.

Beach King

Everything is attached to the replacement top. No additional parts are needed. Just clip the buckles and adjust the tension. You should alternate from one side of the canopy to the other this will avoid off centering the canopy.


Replacement Canopy Installation Instruction

(Revised 2012)

Hewitt

Remove the cover from the box. Place the canopy fabric bundle on top of the frame and unroll the canopy down the center of the frame. When completely unrolled, unfold the cover across the canopy bows and pull down snugly over the frame. Make sure the canopy is straight on the frame with equal amounts of overhang on each side. The QuikLash black webbing should be on the inside right behind or slightly above the aluminum canopy frame going lengthwise.

The Hewitt uses the bungee ball system for the sides and bungee hooks on the ends. Take the bungee loop and insert it through the perforated holes on the QuikLash webbing directly corresponding with a canopy frame rib. Next run the loop around the frame and back around hooking it over the ball that is on the end of the bungee. You should alternate from one side of the canopy to the other this will avoid off centering the canopy. Attach the bungee hooks to the QuikLash webbing on the ends. Stretch the bungee and insert the hook into the hole in the frame.

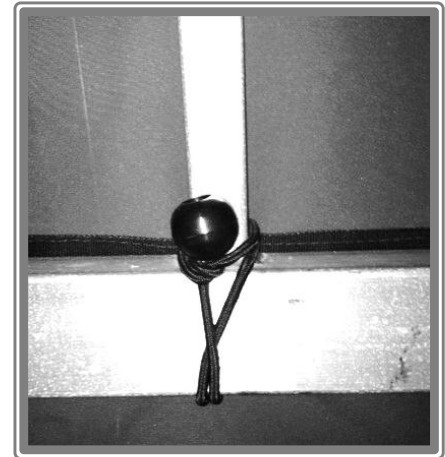

Vinyl manufacturers agree on and recommend the following.

General Cleaning:

Never use household cleaners, powdered or other abrasives, steel wool or industrial cleaners, dry cleaning fluids, solvents, bleach or detergents. Use a medium-soft brush, warm soapy water, (such as Ivory soap), rinse with cool water and then dry.

Mildew Stains:

To kill the bacteria creating the mildew, use a medium-soft brush and vigorously brush the stained area with a 4 to 1 mixture of water and ammonia; rinse with cool water.